


# Compatible with all Gas Springs

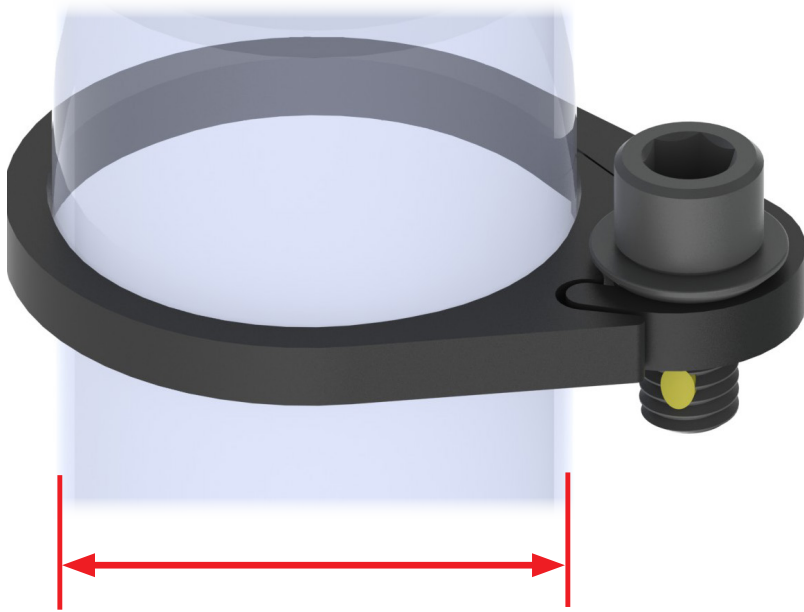

The diameter of the Gas Spring is the only detail that needs to be considered. The clamp can be installed anywhere on the body of the Gas Spring because it does not rely on any grooves or features in the Gas Spring body.

---

## How It Works

As the fastener(s) is tightened, the angle under the screw head “actuates” the clamp causing it to tighten around the Gas Spring

